




Figure 1 Sizing Chart for UV-5AT (Standard Valve)

Note: Also use this chart to size the "Up Section" of the UV-5ATC (Constant Down Speed valve) only.
To size the "Down Section" of the UV-5ATC, please use Figure 2.

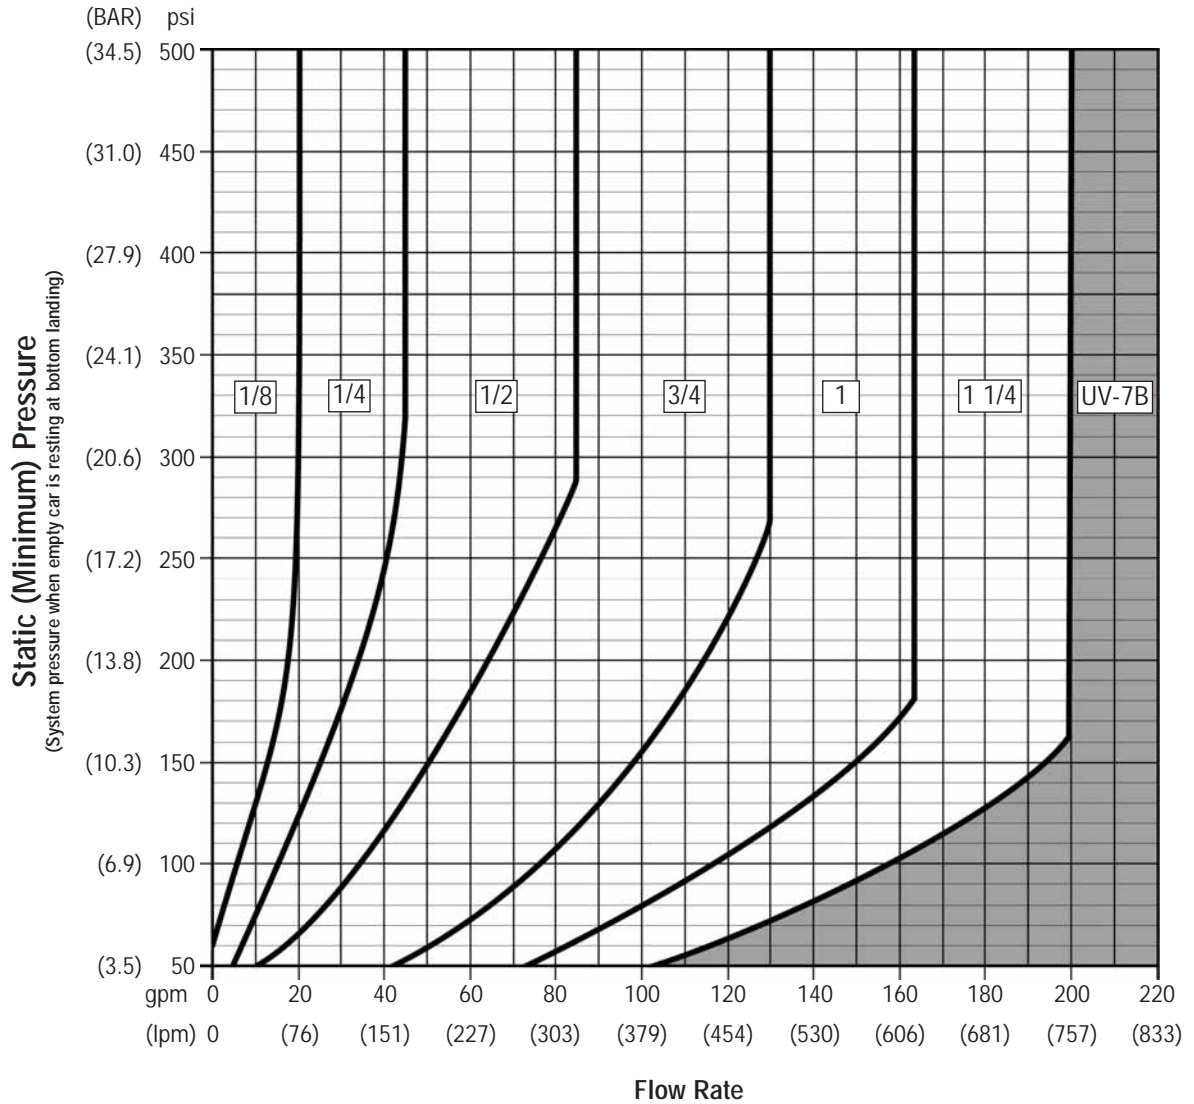

BP adjuster @ 12 turns open & 150 SSU oil @ 100° F (38° C).

- NOTES:**
1. The point of intersection of "Static Pressure" and "Flow Rate" identifies the correct valve size.
 2. It is assumed that Up and Down contract speeds are the same. If the Down contract speed is different from the Up, contact EECO.
 3. **Down contract speed** is full down speed with rated load on the car.

CAUTION: When adjusting the **UV-5AT** valve, set the empty car down speed at 25% **LESS** than the down contract speed. If constant down speed is required between no-load and full-load conditions, use the **UV-5ATC** valve.