




# Figure 2 Sizing Chart for Down Section Of UV-5ATC Only (Constant Down Speed Valve)

**Note:** To Size UV-5AT (Standard Valve), or the "Up Section" of the UV-5ATC (Constant Down Speed Valve), please use Figure 1.

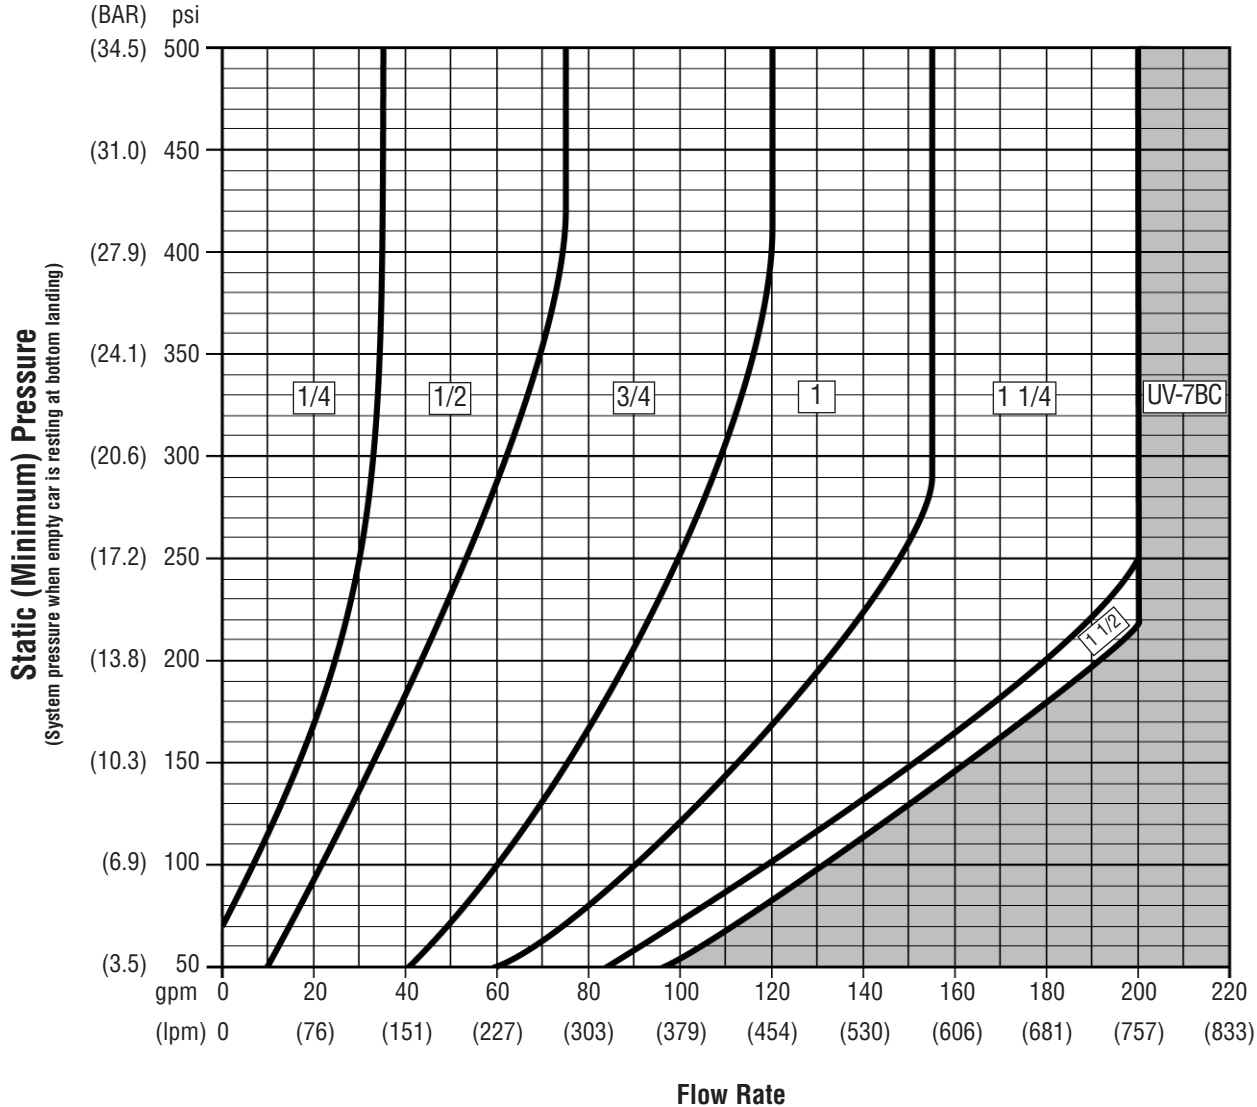

**NOTE:** The point of intersection of "Static Pressure" and "Flow Rate" identifies the correct valve size.